






Yo! Thank you for purchasing the Throwback Bikes R-S Midframe MOLLE Panel!
 This product is compatible with the Super73 R-Series bikes.
 Lets get this sucker on your bike!

In the Box:

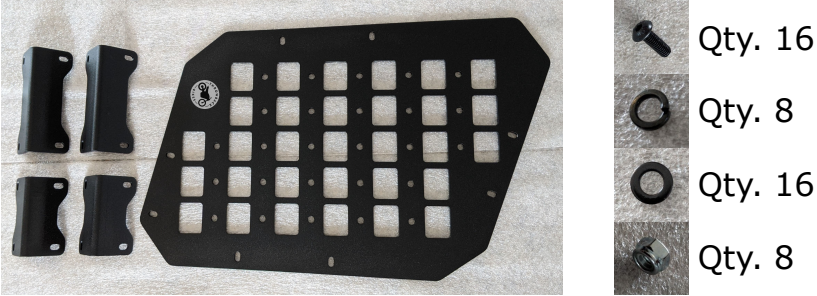

1 MOLLE panel, 2 large brackets, 2 small brackets

Hardware

-  Qty. 16
-  Qty. 8
-  Qty. 16
-  Qty. 8

Not in the Box:



3mm Hex Key and 8mm Wrench or Socket




Slot alignment



Correct



Wrong

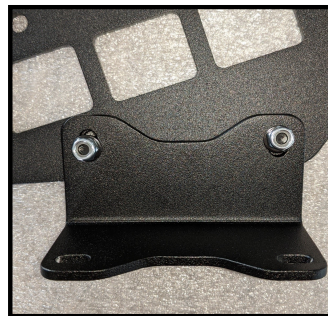

2. Place a flat washer over each bolt and start threading a nyloc nut onto each one.
DO NOT TIGHTEN YET!
 Sorry, didn't mean to yell.



3. Easy right?! Now do that 3 more times with the remaining brackets. You're really doing great! Now lets take this to your bike.
 Don't forget your tools and the remaining hardware.

1. Place the MOLLE panel flat with the logo upwards. Grab a bracket and line it up with the attachment slots. Make sure the slots in the bracket are in the **SAME** orientation as they are on the panel.
 Push through 2 bolts (with no washers) from the back side.



4. Get your hardware ready. Put a split lock-washer on each bolt, follow that up with a flat washer on each one. You're making this look easy! Seriously, have you done this before?



5. Place this absolute unit in your bike as shown above. The logo should be on the lower front area facing the left side of the bike. Looks dope eh?



6. Starting at the top, get 2 bolt and washer stacks started into the threaded holes on the bike. **You aren't going to tighten them until you have all 8 bolts started around the frame.** Go ahead and snug all the bolts down. Don't go crazy though, the threads in the bike are aluminum and you can strip them if you get all He-Man on them. Google He-man if needed.

Last Step. Adjust the MOLLE Panel so it looks nice and parallel with the tubes of the frame. If you need to loosen any of the previously tightened bolts to be able to wiggle it into the perfect place, go ahead and do that. Looking good? Okay, now you can snug down the nuts and bolts that hold the panel to the brackets. Pro-tip, hold the bolt in place and spin the nut to ensure you don't scratch the powder coat finish.

Visit THROWBACKBIKES.COM/SUPPORT for video guides and additional info.

Ride On!