


Hi! Thank you for purchasing the Throwback Bikes MOLLE Crate!

Before beginning, please read all instructions.



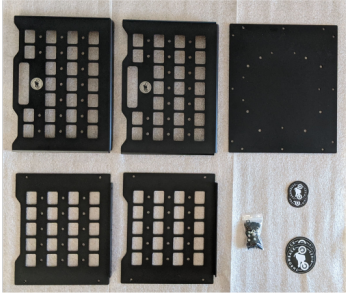


Okay, Lets get this sucker assembled and on your bike!

In the Box:



2 wide sides, 2 narrow sides, 1 bottom plate, hardware, and stickers!


Hardware:

	Qty. 20
	Qty. 48
	Qty. 24
	Qty. 4
	Qty. 4


Not in the Box:



3mm Hex Key and 8mm Wrench OR Socket

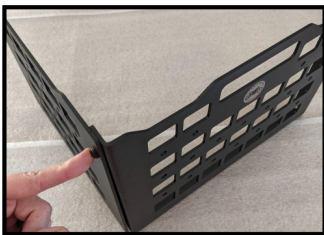

1. Start by placing one narrow side part over the flange on one of the wide side parts. Align the holes and place a short bolt with a flat washer through each of the two holes.

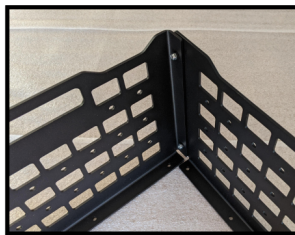

2. Place a flat washer and a nut onto the bolts and start them onto the threads. **DO NOT TIGHTEN YET.** Please ;)




3. Repeat steps 1&2 for the other two side parts. You should have two identical "L" shaped assemblies now. Orient them opposite each other and align the holes along the edges.




4. Using the same approach as the previous steps, join the two assemblies together loosely with 4 more short bolts. Remember to use washers under each bolt and nut.



5. Place the crate on its side and grab the bottom plate. Orientation does not matter. Align the holes and begin inserting short bolts with washers. Starting with the corners is helpful. Secure with washers and nuts on the inside of the crate. Continue with the remaining short bolts. Once all hardware is started, **TIGHTEN ALL THE NUTS AND BOLTS ON THE ENTIRE CRATE.**

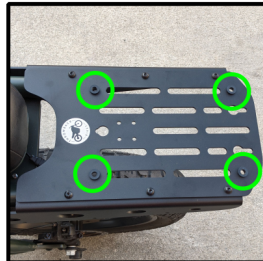

6. With the crate assembled its time to get it on the rack. Place the four 1/4" tall spacers onto the rack and align with the mounting holes. These spacers keep the bottom of the crate from contacting the bolt-heads on the rack.

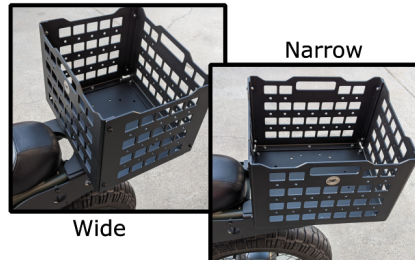

7. Choose either the wide or narrow orientation for the rack. There are additional holes in the narrow orientation to allow for adjustment forward or backwards. Choose the position that keeps the crate closest to your particular seat. Once aligned, insert the 4 long bolts with flat washers through the crate, spacers, and the rack's top plate.



8. Place washers and nuts onto the 4 bolts from the underside of the rack and tighten with the allen key and wrench. Double check that all hardware on the crate is secure.

IMPORTANT. Periodically check that the mounting and assembly hardware is secure. This crate is tough but it Isn't meant for people or pets to ride in. Always secure cargo in the crate. Crate not designed for heavy offroad use. Do not overload the crate beyond the rating of the rack it is mounted to. Don't drink and ride. Be nice to others. Have fun!

Visit
THROWBACKBIKES.COM
for video guides and additional info.

Ride On!